


# HS 43-1E/2E/3E/4E, MHS 43-1

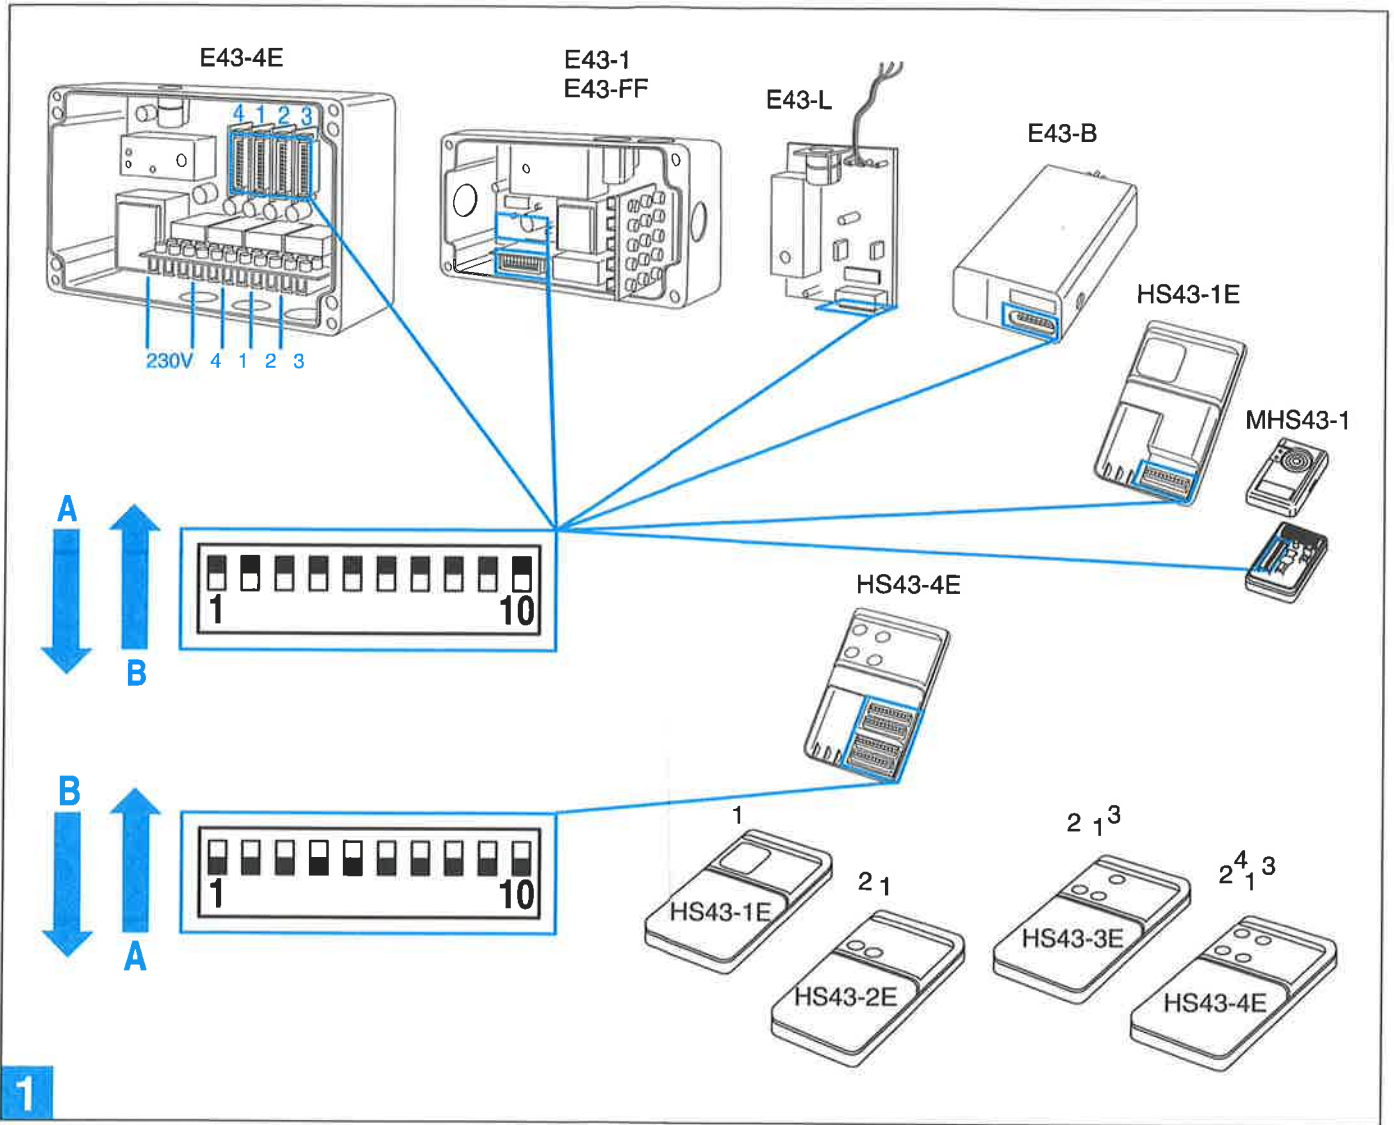

**D**

Sender: HS 43-1E, HS 43-2E  
HS 43-3E, HS 43-4E  
MHS 43-1

**1** Codierung

Batteriefachschieber vom Sender abziehen. Alle Sender und Empfänger werden mit gleicher Codierung ausgeliefert - Kippschalter in Stellung "B". Kippschalter mit Schraubendreher o. ä. auf persönliche Codierung einstellen. Sender und Empfänger müssen gleiche Codierung haben.

**2** Bedienung

Sender waagrecht in Richtung Empfänger halten und entsprechende Sendertaste drücken - Empfänger schaltet angeschlossenes Gerät.

**3** Batteriewechsel

Batteriefachschieber abziehen und Batterie austauschen. Beim Wechsel auf Polarität achten.

Änderungen vorbehalten.

**GB**

Transmitter: HS 43-1E, HS 43-2E  
HS 43-3E, HS 43-4E,  
MHS 43-1

**1** Coding

Remove battery cover from transmitter. All transmitters are supplied with the same coding, with toggle switch in setting "B". Set the toggle switch to your personal coding using a screwdriver or similar tool. Transmitter and receiver must have the same coding.

**2** Operation

Hold the transmitter horizontally in the direction of the receiver, and press the corresponding transmission button. The receiver will switch the device which is connected.

**3** Battery change

Remove the battery cover and replace the battery. Pay attention to polarity when changing the battery.

Subject to change without notice.